

BUBBLE MACHINE

Parts	1
Optional Items	2
Requirements	3
Instructions	4
Clean-Up	5
Warnings	6
Trouble Shooting	7

Volume # 2013-A
Document Property of
Diamond Rental ©

PARTS

- Bubble Machine with power cord
- Bubble Fluid Tray
- Hanging Bracket

OPTIONAL ITEMS

- Heavy Duty Extension Cord - 50' or Less
- Bubble Fluid
- Fuse # F1AL250V

REQUIREMENTS

- 120 Volt / 1 Amp Power Source
- Bubble Fluid
- Flat / Level Surface

CLEAN-UP

- Turn off power switch
- Unplug from the power source
- Loosen the front screw and remove the bubble fluid tray
- Rinse out fluid tray (fluid not removed will thicken over time)
- Return tray and tighten the front screw.



Sample Photo / Actual Bubble Machine Style May Vary.

WARNINGS

- Not for use outdoors in windy conditions.
- Not for use indoors on a hard surface.
- When thousands of bubbles burst on a hard surface, they can produce a slick surface.
- Burst bubbles can make carpet damp.

TROUBLE SHOOTING

- If you have any problems or concerns, please call your local Diamond Rental Party Location.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West

OPERATION INSTRUCTIONS

1. Loosen the front cover screw
2. Lift the top to expose the bubble fluid tray inside.
3. Remove and fill the tray with bubble fluid no more than 3/4 full or 24 oz.
4. Replace the tray inside the housing.
5. Close cover and tighten the screw.
6. Place on a flat surface or use the hanging bracket to install.
7. Plug unit into a proper power source.
8. Turn the "On/Off" switch on as needed.
9. Check the bubble fluid tray as needed to refill

One 24 oz. tray of bubble fluid will last approximately 30 minutes of continual use.

SEE WARNINGS!