

MULTI-MEDIA PROJECTOR

Parts	1
Optional Items	2
Requirements	3
Symbols	4
Operation	5
Cable Types	6
Helpful Hints	7

Volume # 2013-A
Document Property of
Diamond Rental ©

PARTS

- Projector
- Carrying Case
- Power Cable
- RCA Audio/Video Cable
(Red/White/Yellow Ends)
- VGA Video Cable
(Blue Rectangle Ends)
- USB Cable
(Standard & Mini Ends)
- HDMI Cable
(Chrome Rectangle Ends)
- Quick Start Manual



Sample Photo / Actual Multi-Media Player Style May Vary.



RCA Plugs
(DVD or VCR)

VGA Plugs
(Apple Computer)

USB Plugs
(IBM or Apple)

HDMI Plugs
(Other Audio/Video)

HELPFUL HINTS

Diagonal Screen Sizes

- 60" @ 6.5'-7.5' Away
- 80" @ 8.5'-10.5' Away
- 90" @ 9.5'-11.5' Away
- 150" @ 16'-20' Away

Laptop Export Port Keys

- Apple = F7
- Compaq = Fn+F4 or F6
- Dell = Fn+F8
- Fujitsu = Fn + F10
- HP = Fn+F4 or F6
- IBM ThinkPad = Fn+F7
- Sony = Fn + F7
- Toshiba = Fn+F5

OPTIONAL ITEMS

- Extension Cord
- Movie Screen

REQUIREMENTS

- 120 Volt / 3 Amp Power Source

SYMBOLS

- Power
- Menu
- Source
- Volume
- Auto Image
- Keystone
- Help

OPERATION INSTRUCTIONS

1. Connect the power cord to the projector and to an outlet.
2. Slide open the lens cover (tab above lens).
3. Touch the power light button.
4. Wait 5-10 sec. for the power light to stop blinking and turn green.
5. Turn on your media source (computer or other).
6. You may need to press a specific key combination on your computer to activate your computer's external video port.
7. On most laptops hold down the FN key while pressing a key labeled CRT/LCD/ or LCD/VGA, a monitor icon or similar.
8. If this does not work, restart your computer. (Make sure the projector is connected and on.)
9. Press the source button to change if needed.
10. Use front release button to adjust the height as needed.
11. Use Keystone buttons to make picture square.
12. Zoom in/out to focus.
13. When finished, before unplugging, press the power button until it blinks.
14. When the power button turns off, the fan will stop. It is safe to unplug unit.
15. See Manual for more info.

TROUBLE SHOOTING

- See Product Manual.
- If you have any additional problems or concerns, please call your local Diamond Rental Party Location.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353