

DIAMOND RENTAL

Parties · Tents · Events

POPCORN MACHINE

Parts	1
Optional Items	2
Requirements	3
Set-Up	4
Operation	5
Clean-Up	6
Popcorn Kits / Tips	7

Volume # 2013-B
Document Property of
Diamond Rental ©

PARTS

- Popcorn Machine with the following:
1 Kettle w/Handle
3 Switches
 Light Switch
 Motor Switch
 Heat Switch
- Popcorn Scoop

OPTIONAL ITEMS

- 3 Prong Heavy Duty Extension Cord (10-12 Gauge / 50' or Less)
- Popcorn Kit (Oil, Salt & Kernels)

REQUIREMENTS

- 120 Volt / 10 Amp Power Source

SET-UP

- Level Surface

CLEAN-UP

- When cooled, remove any remaining kernels from the kettle.
- Remove any remaining popped corn from the plexiglass cabinet.



Sample Photo / Actual Popcorn Machine Style May Vary.

OPERATION INSTRUCTIONS

1. Place unit near a power source, not to exceed 50'.
2. Plug popcorn machine into a power source / wall outlet.
3. Turn the "Kettle Heat" switch to on.
4. Turn the "Kettle Motor" switch to on.
5. Open and add the popcorn kit into the kettle and close the lid.
6. Allow kernels to pop.
7. After it has finished (One kernel popping per second) rotate the handle to dump the popcorn still in the kettle.
8. Return the kettle to the upright position.
9. On the last batch, turn off kettle halfway through popping cycle to eliminate smoking.
10. Turn all switches off.

POPCORN KITS / TIPS

- 8oz Packet
- 7 Servings or 5 Cups
- 150 Calories
- 10+ Kits Per Hour
- Popcorn best if popped in 3-5 batches

TROUBLE SHOOTING

- If you have any problems or concerns, please call your local Diamond Rental Party Location.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353