

DIAMOND RENTAL

Parties · Tents · Events

PUNCH FOUNTAIN

PARTS

- Punch Fountain (3, 5 or 7 Gallon)
- Floral Holder/Cup Top

OPTIONS

- Extension Cord (10-12 Gauge / 50' or Less)
- Non-Pulp Punch
- Flowers
- Ice Cubes (Not Slush)

REQUIREMENTS

- 120 Volt Power Source (1 Amp)

SET-UP

- Level Surface / Table

CLEAN-UP

- Pour or ladle out remaining beverage (Do Not Pump Dry)
- Fill empty bowl with 2+ gallons of warm water.
- Allow warm water to circulate for five (5) minutes.
- Empty warm water and dry unit.
- DO NOT take apart or use a scouring pad.



Sample Photo / Actual Punch Fountain Styles May Vary.

OPERATION INSTRUCTIONS

1. Pre-Chill your drink in advance. The fountain does not chill or refrigerate
2. Set-up and test the fountain with water before your event.
3. Pour your non-pulp beverage of choice into the lower level bowl.
4. Plug the fountain into an electrical outlet or power cord.
5. Flip the "On" switch on the base of the fountain to activate.
6. Carbonated drinks will dissipate within 10-20 minutes. It is recommended to add small amounts of a carbonated drink from time to time to maintain a fizz.

Parts	1
Options	2
Requirements	3
Set-Up	4
Operation	5
Clean-Up	6
Warnings	7

Volume # 2013-A
Document Property of
Diamond Rental ©

WARNINGS

- Never run the fountain dry of a beverage.
- Never immerse the fountain in water.
- Use large cubes or chunks of ice. Slush ice will clog the pump.
- Fruit drinks with pulp, seeds or rind will clog the pump.
- Ice cream or a foamy punch may also restrict the flow of punch.

TROUBLE SHOOTING

- If you have any problems or concerns, please call your local Diamond Rental Party Location.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353