

DIAMOND RENTAL

Parties · Tents · Events

PARTY CANOPY - 20' X 20'

Parts	1
Optional Items	2
Requirements	3
Installation Steps	4
Take Down Steps	5
Installation Photos	6
Layout Drawing	7

Volume # 2013-A
Document Property of
Diamond Rental ©

PARTS

- 20x20 Tent Top
- Transportation Bag
- Ground Drop Cloth
- Four (4) Corner Fittings
- Four (4) Side Tee Fittings
- One (1) 8-Way Crown
- Eight (8) Perimeter Poles
- Four (4) Corner Rafters
- Four (4) Side Rafters
- Eight (8) Leg Poles
- Eight (8) Feet
- Eight (8) Stakes



Sample Photo / Actual Party Canopy Style May Vary.

LOCATIONS

SALT LAKE CITY
4518 South 500 West
801-262-2080

OREM
1350 Sandhill Road
801-222-9311

OGDEN
1639 South 1900 West
801-393-5353

OPTIONAL ITEMS

- Canopy Walls (8')

REQUIREMENTS

- Grass or Dirt Surface
- Sledge or Large Hammer to Drive Stakes
- Two or More People (4-6 Recommended)

TAKE-DOWN

- Reverse the installation steps to disassemble the canopy.
- Inventory all parts before leaving the site.
- Return the rolled canopy top inside the transportation bag.

INSTALLATION INSTRUCTIONS

BUILDING THE FRAME

1. Using the parts list and drawings on page #2, separate and layout all the parts.
2. Inspect the tent site thoroughly for obstacles, underground and overhead wires, pipes, etc. If necessary, consult with your local utility company prior to installation.
3. Lay out top frame by placing the corner fittings (A), side tee fittings (B) and perimeter poles (C) per the drawing. Do not install the legs or roof rafters at this time.
4. Begin assembly of the frame by inserting the perimeter poles into the corner fittings and make sure

the snap pin is locked into place.

5. Next, move to side fittings and repeat the procedure.

6. Continue this process until the perimeter framework is assembled.

7. Insert corner rafters (D) into the corner fittings (A) and ensure that the snap pins lock into place.

8. Install the corner rafters (D) into the 8-way crown fitting (A). It may be necessary to lift up on the crown fitting to install the corner rafters and lock in place with the snap buttons.

9. Install the side rafters (F) by inserting them into the side tee fittings (B).

10. Then insert the top of the side rafters (F) into the 8-way crown (E). The side rafters may need to be pushed toward the perimeter to make the connection at the 8-way crown.

11. Inspect the frame to be sure all snap buttons have completely secured the poles. When inspected you are now ready to install the top on the frame.

INSTALLING THE TOP

12. Use a ground drop cloth to protect the vinyl top during its installation.
13. Lay the top over the frame and pull over the peak.

**CONTINUED
ON PAGE #2**

14. Fasten the corner straps over the eye bolts on the corner brackets.

15. Lift one side of the frame and install two leg poles (G) into the corner fittings (A).

16. Then install a leg pole (G) into the side fitting (B) to complete all three legs on one side.

17. Lift the opposite side of the canopy and insert the legs (G) into the corner and side tee fittings as done in the previous step.

18. Finish by installing the canopy legs (G) in the final two side tee fittings (B).

19. Make sure all snap pins are locked into place.




20. Attach canopy top to the frame with the cam buckles and straps that are attached to the top.

21. Clip the flat snaps at the top of the straps to the rings at the corner of each valance.

22. Then insert the hook on the bottom of the strap into the hole at the bottom of each leg.

23. Tighten cam buckles alternately until the top is fully tensioned.

24. Stake the tent appropriately for existing conditions.

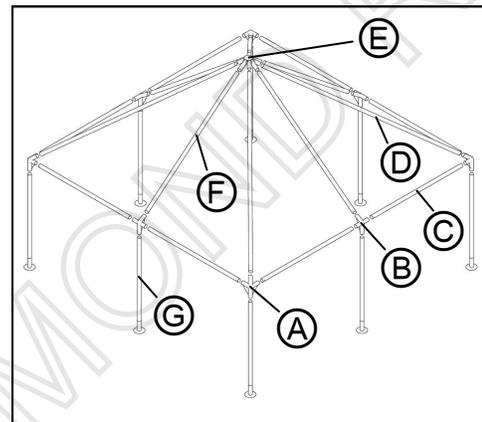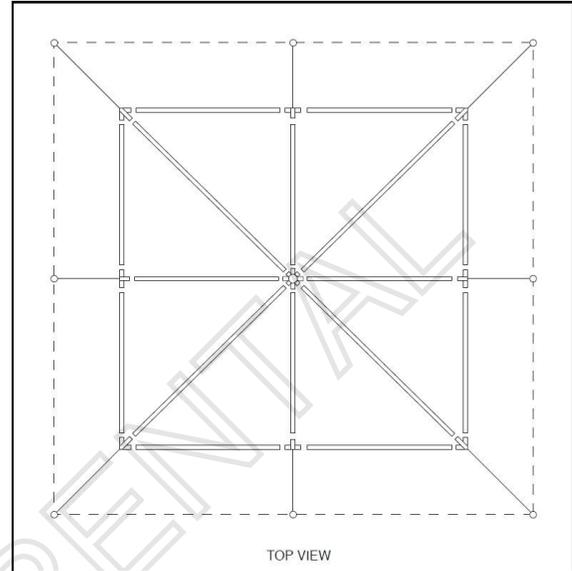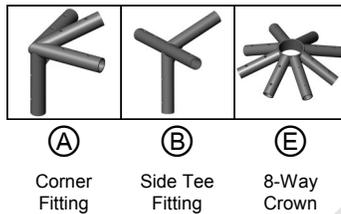

FITTINGS & POLES LIST:

- (A) - Corner Fittings (4)
- (B) - Side Tee Fittings (4)
- (C) - Perimeter Poles (8)
- (D) - Corner Rafters (4)
- (E) - 8-Way Crown Fitting (1)
- (F) - Side Rafters (4)
- (G) - Canopy Legs (8)

